The Model PS301/PS302/PS304/PS305 (Glass Bulb Type) Extra Large Orifice Standard Upright, Pendent and Quick Response.

Description

The Model PS301/PS302/PS304/PS305 (Glass Bulb Type) Extra Large Orifice Standard Upright, Pendent and Quick Response. Pendent Sprinkler Identification Number (SIN): PS302 (standard), PS304 (quick). Upright Sprinkler Identification Number (SIN) PS301 (standard) PS305 (quick). All Protector Sprinklers are manufactured by using time-proven Belleville seal to ensure long life and safe operation. The forged frame is stronger and more streamlined than traditional die cast and sand cast frames. The design provides a crescent-shaped water discharge pattern for installation along a wall or under a beam or ceiling. The state-of-the-art design incorporates highly thermal sensitive glass bulb actuating for prompt and precise operation. For easy tightening from different angles and reducing assembly effort, Protector standard tools (wrench and key) are highly recommended to be exerted in the installation of Protector Sprinklers. This sprinkler is available in various temperature ratings (see chart on page 2) and finishes.

Sprinkler Operation

The operating mechanism is a frangible glass bulb which contains a heat responsive liquid. During a fire, the ambient temperature rises, causing the liquid in the bulb to expand. When the ambient temperature reaches the rated temperature of the sprinkler, the bulb shatters. As a result the waterway is cleared of all sealing parts and water is discharged towards the deflector. The special designed deflector enables to transform the discharging water into a more efficient and well-distributed spray pattern and effectively cool down the heat to suppress fire spread.

Warnings

Protector's PS301/302/304/305 Extra Large Orifice Pendent/Upright Standard/Quick sprinklers must follow NFPA13 for their design and installation. The design is to follow control mode density area flow calculation requirements for respective occupancies described in the latest edition of NFPA 13.

Technical Specification

- **Model SIN :** Standard PS301, PS302 (5mm bulb)/Quick Response PS305, PS304 (3mm bulb)
- **Style :** Upright Sprinkler: PS301, PS305/Pendent Sprinkler: PS302, PS304
- **K-Factor :** 11.2 (Imp.) / 160 (S.I)
- **RTI :** Standard Response < 90 ($m/s^{1/2}$), Quick Response < 33 ($m/s^{1/2}$)
- **Nominal Working Thread :** 3/4"PT (20mm)
- **Maximum Working Pressure :** 175PSI (1200kPa)
- **Factory Hydrostatic Test :** 100%@500 PSI (3450 kPa)
- **Minimal Operating Pressure :** 7 PSI (48 kPa)

Maximum Coverage

Standard spray coverage is up to:Light Hazard = 384 square feet(35.8 sq.m); Ordinary Hazard = 256 square feet(24 sq.m)per NFPA 13. see page 4 for distribution patterns.

Finishes Available

- **Chrome Plated**

Temperature Rating

SPRINKLER TEMPERATURE CLASSIFICATION	NORMINAL SPRINKLER TEMPERATURE RATING	N.F.P.A MAXIMUM AMBIENT (CEILING) TEMP.(ALLOWED)	GLASS BULB COLOR
Ordinary	155°F/68°C	100°F/38°C	Red
Intermediate	175°F/79°C	150°F/65°C	Yellow
Intermediate	200°F/93°C	150°F/65°C	Green

Discharge Curve

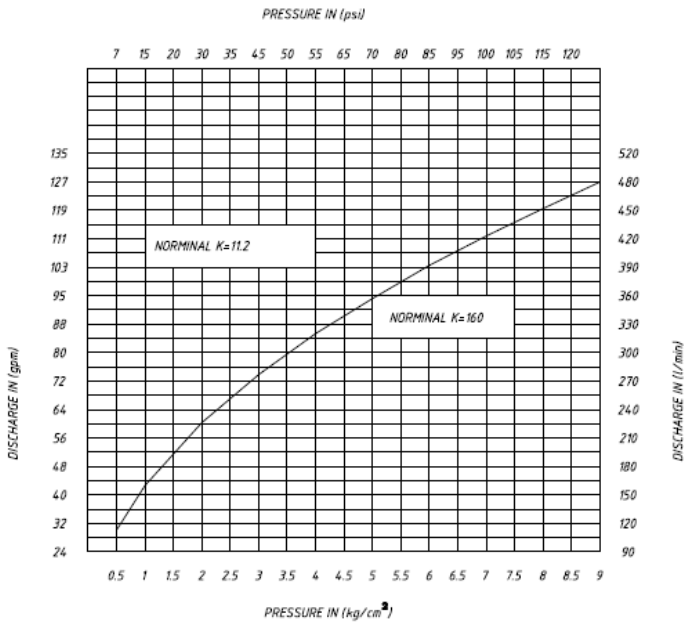

Installation

All Protector Sprinklers must be installed according to NFPA 13 Standards. Deviations from these requirements and standards or any alteration to the sprinkler itself will void any warranty made by Protector Safety Company. In addition, installation must follow local government provisions, codes and standards as applicable. The system piping must be properly sized to ensure the minimum required flow rate at the sprinkler. Check for the proper model, style, orifice size and temperature rating prior to installation. Install sprinklers after the piping is in place to avoid mechanical damage, replace any damaged units. Wet pipe systems must be protected from freezing. Upon completion of the installation, the system must be tested per recognized standards. In the event of a thread task, remove the unit, apply new pipe joint compound or tape, and reinstall.

Protector Standard Tools

Protector Sprinklers can be installed only by using Protector standard tools, either wrench or key. The standard wrench or key provides the proper leverage when tightening the sprinkler and minimizes slippage during installation. Any other wrench or key may damage the sprinkler.

Protector Sprinkler Wrench

Protector Sprinkler Key

Installation Sequence

- **Step 1.** The unit must be installed in the upright position for the Upright Sprinklers, and in the Pendent position for the Pendent Sprinkler, Pendent Recessed Sprinkler.
- **Step 2.** Use only a non-hardening pipe joint compound or tape seal. Apply only to the male threads.
- **Step 3.** Hand tighten the sprinkler into fitting.
- **Step 4.** Tighten the unit into the fitting. A lead-tight joint requires only 150 to 200 kgf-cm (14.7 to 19.6 N-m) of torque. Once torque level reaches over 300 kgf-cm (29.4 N-m) it may distort the orifice seal, resulting in leakage. For exposed piping systems, the sprinkler should be oriented so the frame is paralleled with the branch line pipe.

Caution

Do not over- or under-tighten the sprinkler to compensate for the insufficient adjustment in the escutcheon plate. Re-adjust the position of the sprinkler fitting to match. Protection clips are used to protect its bulb. Please have clip on at all times during transportation.

Maintenance

Sprinklers must never be altered after manufacture. Any alteration such as painting and coating will directly harm the sprinkler and cause malfunction. Sprinkler in contact with corrosive products should be replaced if they cannot be cleaned completely. Visual inspection are recommended after installation. After installation, an annual close-up inspection will be sufficient. Inspection and maintenance of fire protection system is the responsibility of the owner. It is recommended that automatic sprinkler system be inspected and tested according to local and/or national regulations.